

PURPOSE:


The purpose of this instruction is to describe how to install the MBV-PBPL into an MBV series valve to allow for the downstream addition of another valve body.

TOOLS REQUIRED:

- 1 ½" Wrench or Crescent Wrench

PROCEDURE:


1. Place the valve on the table with the handle(s) facing you and the ports up.

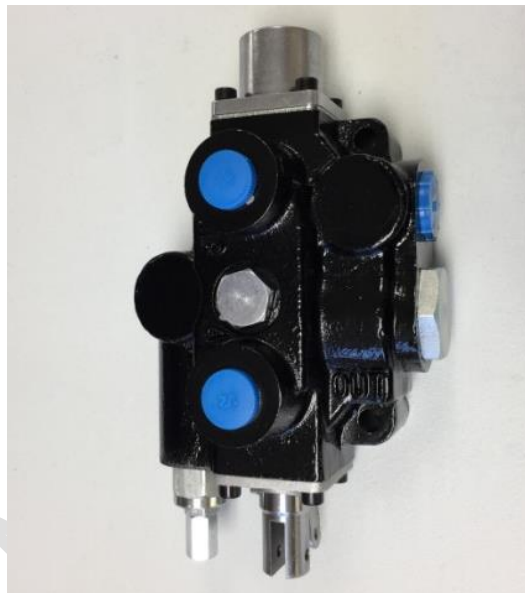

2. Locate the large Bung Fitting on the right-hand side of the valve body and remove it using the 1 ½" wrench.



3. Install the MBV-PBPL in place of the Bung Fitting.

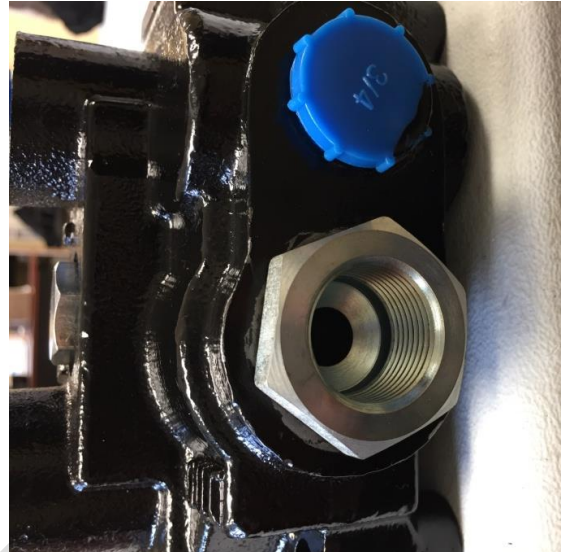

- a. The oil hole inside the MBV-PBPL is to be used to connect to the downstream valve
 - b. The normally used $\frac{3}{4}$ " NPT Tank Port is still used for a return to tank.
4. Once Installed - remove the $\frac{3}{4}$ " plastic plug from the tank return outlet

